





205A St John's Hill, London, SW11 1TH  
 +44 (0) 20 7738 0202 | [sales@forbesandlomax.com](mailto:sales@forbesandlomax.com) | [www.forbesandlomax.com](http://www.forbesandlomax.com)

Architrave

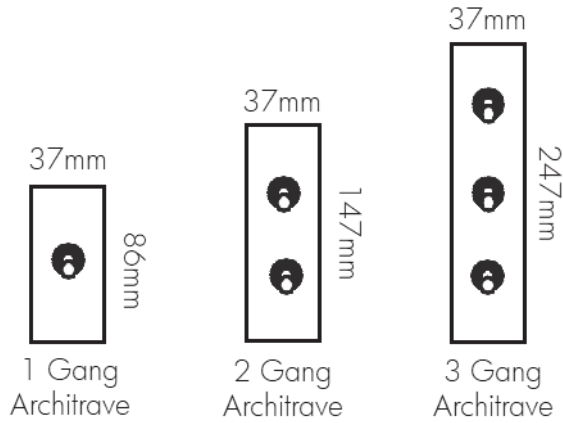

\* the architrave plate can be used with the following dimmer modules Trailing Edge VPro, Push ON/OFF and 0-10v

Standard Plates

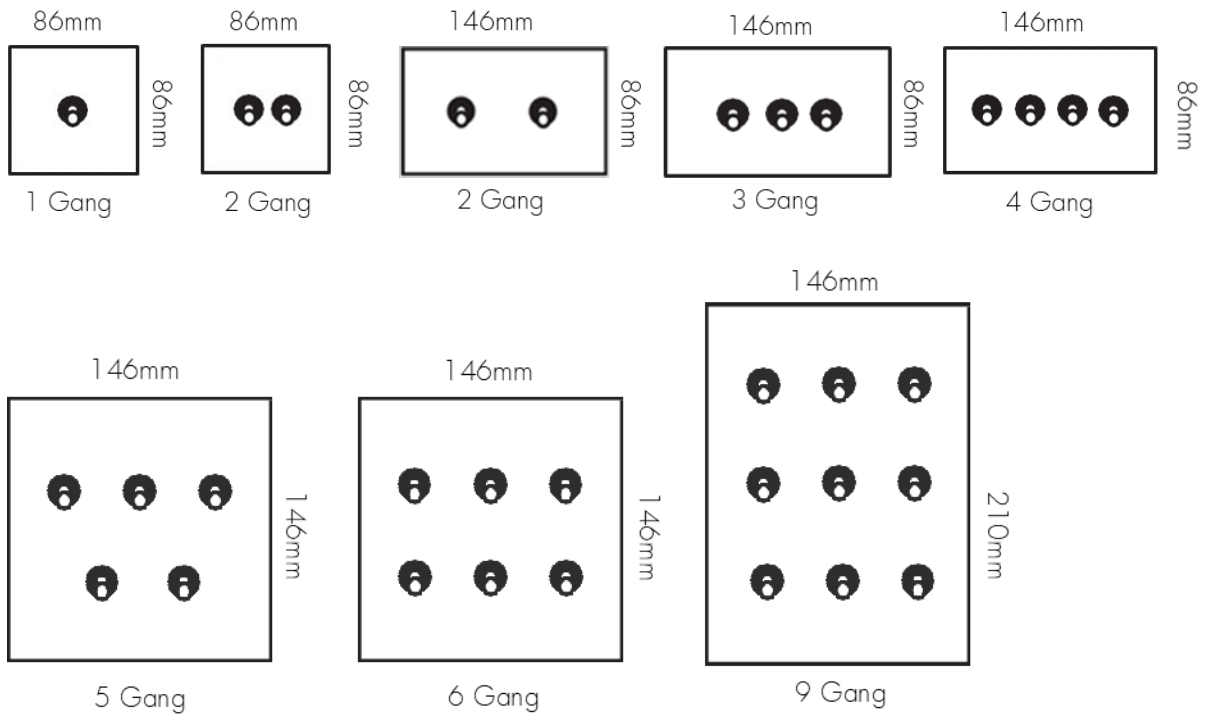



205A St John's Hill, London, SW11 1TH  
 +44 (0) 20 7738 0202 | [sales@forbesandlomax.com](mailto:sales@forbesandlomax.com) | [www.forbesandlomax.com](http://www.forbesandlomax.com)

### Backbox Dimensions

Backbox	Height	Width	Depth
			Minimum 35mm deep, but recommend 47mm for ease of installation
Single	73	73	35
Double **	72	133	35**
Dual	73	161	35
Square	134	134	35
Rectangular	194	135	35
Architrave*	80	32	38
Architrave Double*	140	32	38

\*Backboxes to be recessed by 6mm for: Architrave, Picture/Clock point and Shaver Sockets

\*\*Shaver Sockets use 47mm deep backboxes