



**ROTARY DIMMER
120W LED/300W INCANDESCENT**

RECOGNIZED
COMPONENT



Intertek

5008422

Conforms to UL1472 and CSA-C22.2 no.184

INSTALLATION INSTRUCTIONS
READ AND SAVE THESE INSTRUCTIONS

IMPORTANT: We cannot guarantee that all LEDs labelled as “dimmable” can actually be dimmed satisfactorily. Maximum and minimum loads may vary according to the make and type of LED. To optimize the dimming range, for LED lighting in particular, the minimum brightness setting of the dimmer can be adjusted [see “Adjusting the Minimum Brightness” below].

INSTALLING YOUR DIMMER

To be installed by a certified electrician or other qualified person. To be installed and/or used in accordance with appropriate electrical codes and regulations. For instructions regarding wallbox installation and wallplate assembly refer to the ‘Instructions for Electricians and Decorators’ information sheet.

WARNING


For control of permanently installed incandescent or LED lamp fixtures Only.

To prevent shock or electrocution, always turn the power OFF at the service panel before installing this unit, working on the circuit, or changing a lamp. It is normal for the dimmer to feel warm during operation.

CAUTION

To reduce risk of overheating and possible damage to other equipment, do not install to control receptacle, a fluorescent light or bulb or a motor-operated appliance. Connect dimmers only in a 120VAC, 60Hz circuit. Do not use dimmer with a load whose power requirements exceeds the maximum power rating marked on the dimmer. No de-rating is necessary for multi-gang installations. Use copper wire only. Connect to 12AWG or 14AWG stranded or solid copper conductors

WIRING DIAGRAM

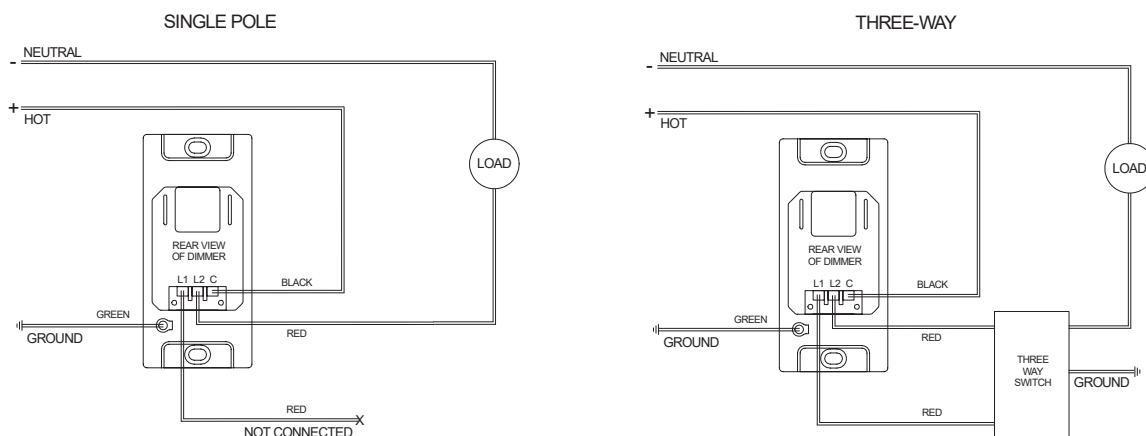

WARRANTY

Lifetime Warranty. The device you have purchased is warranted under normal use against defects in workmanship and materials for as long as you own the device. If the device fails due to manufacturing defect during normal use, return the device for replacement to the store where purchased or send to: Forbes & Lomax, 979 Third Ave, 1502, NY 10022. All requests for replacements must include a dated sales receipt (legible copies acceptable). ALL OTHER WARRANTIES, INCLUDING BUT NOT LIMITED TO ANY WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO A PERIOD OF TWO YEARS FROM THE DATE OF PURCHASE. YOUR SOLE AND EXCLUSIVE REMEDY AGAINST FORBES & LOMAX LTD. UNDER ANY WARRANTY SHALL BE THE EQUIVALENT REPLACEMENT OF THE DEVICE. IN NO EVENT SHALL ANY WARRANTY APPLY TO ANY DEFECT ARISING OUT OF ANY ALTERATION OF THE DEVICE, IMPROPER INSTALLATION, MISUSE ABNORMAL USE OR NEGLIGENCE. IN NO EVENT SHALL FORBES & LOMAX LTD. BE LIABLE FOR LOST PROFITS, INDIRECT, SPECIAL, EXEMPLARY, INCIDENTAL OR CONSEQUENTIAL DAMAGES. Some states do not allow limitations on how long implied warranties last and do not allow exclusion or limitation of incidental or consequential damages. Some of the above limitations or exclusions may not apply to every purchaser.



ROTARY DIMMERS: 120W LED/300W INCANDESCENT OPTIMISING THE PERFORMANCE OF YOUR LED DIMMER

If your lights are flickering when the dimmer is set to minimum or maximum brightness, you can increase the default minimum and maximum brightness settings of the dimmer, which may prevent this from happening.

Adjusting the minimum brightness

1. Switch on and set the dimmer knob to the MINIMUM position (turn fully anti-clockwise).
2. Press to turn the lights off and back on again 3 times [OFF–ON x 3], leaving approximately one second between presses.
3. The lights will step up and down in brightness, then go off, to show that the dimmer is in CONFIGURATION MODE.
4. Turn the dimmer fully clockwise. The lights will come on and allow you to adjust the minimum brightness.
5. Adjust the brightness that you are happy with as the minimum. Leave the dimmer in this position.
6. After 3 seconds the dimmer will notice that you have stopped adjusting the minimum. The lights will step up and down in brightness to show that the dimmer has returned to normal operation.
7. Continue to use the dimmer as normal, with your new minimum brightness.

Adjusting the maximum brightness

1. Switch off and set the dimmer knob to the MAXIMUM position (turn fully clockwise)
2. Turn the lights on and back off again. ON – OFF, roughly once per second
3. Set the dimmer knob to the MINIMUM position (turn fully anticlockwise)
4. Turn the lights on and back off again. ON – OFF, roughly once per second
5. Set the dimmer knob to the MAXIMUM position (turn fully clockwise)
6. Turn the lights on
7. The lights will step up and down in brightness to show that the dimmer is in CONFIGURATION MODE, then either stay at a low light level or go off
8. Turn the knob fully anticlockwise. The lights will come on and allow you to adjust the maximum brightness
9. Adjust the brightness that you are happy with as the maximum. Leave the dimmer in this position
10. After 3 seconds the dimmer will notice that you have stopped adjusting the maximum. The lights will step up and down in brightness to show that the dimmer has returned to normal operation
11. Continue to use the dimmer as normal, with your new maximum brightness

Changing the dimming mode

Unless the lights are flashing it is likely that the best dimming performance is achieved in MODE 1. If the lights are flashing then you may be able to improve the performance by manually changing the dimming mode to MODE 2, or in a small number of cases, MODE 3.

1. Switch on and set the dimmer knob to the MAXIMUM position (turn fully clockwise).
2. Press to turn the lights off and back on again 3 times [OFF–ON x 3], leaving approximately one second between presses.
3. The lights will step up and down in brightness to show that the dimmer is in CONFIGURATION MODE, and then go off.
4. Immediately turn the knob fully anti-clockwise to select MODE 2, or fully anti-clockwise then fully clockwise to select MODE 3.
5. The lights will FLASH 2 or 3 TIMES to show which mode the dimmer is in.
6. The dimmer can now be operated normally in the new mode.

If you follow the same procedure again, it will revert to mode 1 and the lights will FLASH ONCE to indicate that you have successfully returned the dimmer to MODE 1.